




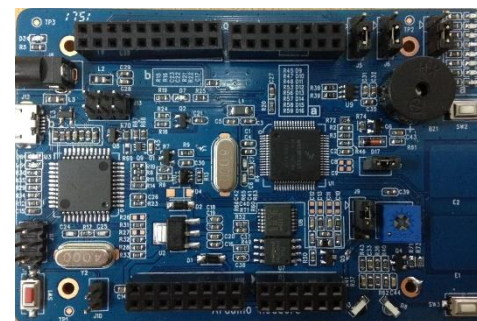

## STEP-BY-STEP INSTRUCTIONS

1. Connect the S08P-LITE board to a PC using the included micro USB cable to Power/OSBDM Micro USB “J12.” A power LED will illuminate.



2. The S08P-LITE comes preprogrammed with a demo which shows all the peripheral functions on board, including the SPI Flash, IRDA transceiver, I2C DAC, potentiometer, thermistor, and touch pads.
3. Explore more out of box demos and download software and tools on [www.nxp.com/S08P](http://www.nxp.com/S08P).
4. Enjoy your design freedom with the S08P-LITE.

## **SUPPORT**

Visit [www.nxp.com/support](http://www.nxp.com/support) for a list of phone numbers within your region.

## **WARRANTY**

Visit [www.nxp.com/warranty](http://www.nxp.com/warranty) for complete warranty information.



## **Get Started**

Download installation software and documentation at [www.nxp.com/S08P](http://www.nxp.com/S08P)